



## Extinguish and Discard Cigarette

1. Always make sure that the ash can is closed before inserting the cigarette.
2. Open the top and with the cutter blade and ash can in the closed position.
3. Insert the cigarette with the burnt end down.
4. Close the top. Wait at least one minute before discarding the cigarette.

It isn't necessary to cut the end off when you're discarding the cigarette.



## Extinguish and Save Cigarette



Step 1



Step 2



Step 3

1. Always make sure that the Ash Can is closed before inserting the cigarette. With the Ash Can facing you, place both thumbs and index fingers on the top and bottom of the Butt Cutter. Open the top.
2. Pinch the back side of the Butt Cutter at the top to open the Cutter Arm.
3. Drop the lit cigarette into the Cigarette Compartment with the burning end facing downward (filter up).
4. Close the top.
5. Wait five seconds. This gives the cigarette time to extinguish and cool down. The cooler the cigarette, the better the cut. Then, pinch the Cutter Arm Closed from the bottom of the Butt Cutter to cut the ash end off.
6. Wait at least one minute, and then open the Ash Can to discard your ashes (or simply wait till a more convenient time).



Step 4



Step 5



Step 6

## Lit the Wrong End of the Cigarette?

How many times have you lit the wrong end? No problem, just drop the cigarette in filter first and trim it off.